



Second pin connect directly to the engine block - minus battery



Connect directly to engine block

